
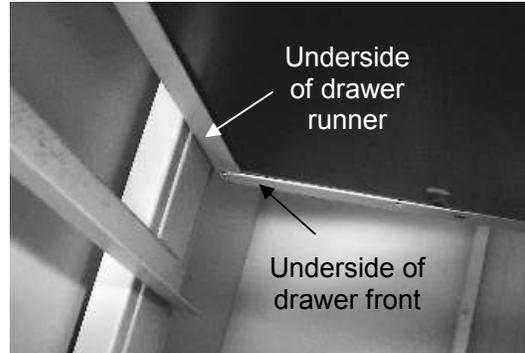


Drawer Fitted (Handle First)
Multi-Drawers Cabinets

If one of the Multi-drawer cabinet drawers has been accidentally fitted handle first, it is possible to remove the drawer using a slot headed screw driver.

Firstly remove the drawers above, or below to allow better access

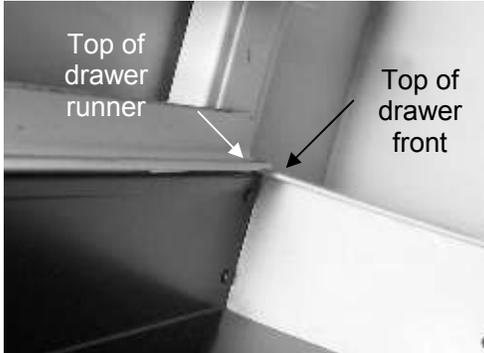

It is hard to remove a drawer which has been fitted handle first, this is because the return folds on the drawer front (top and bottom) prevent the drawer from fitting back out through the drawer runners (As above)



To release the drawer from above:
Place a screwdriver between the runner & top of the drawer front, and lever the corner of the runner upwards.
(Repeat both sides)



To release the drawer from below:
Place a screwdriver between the runner & underside of drawer front, and lever the runner downwards.
(Repeat both sides)

Once the runner has been bent up, or down sufficiently you should be able to release the drawer.
Once the drawer has been removed you will need to straighten the runners using a pair of pliers, this is to allow the drawers above, or below to function correctly again.

